



**Example1: Load carrier; not on a pallet**  
e.g. Gitterbox or non-returnable cardboard box ‚just one material number‘

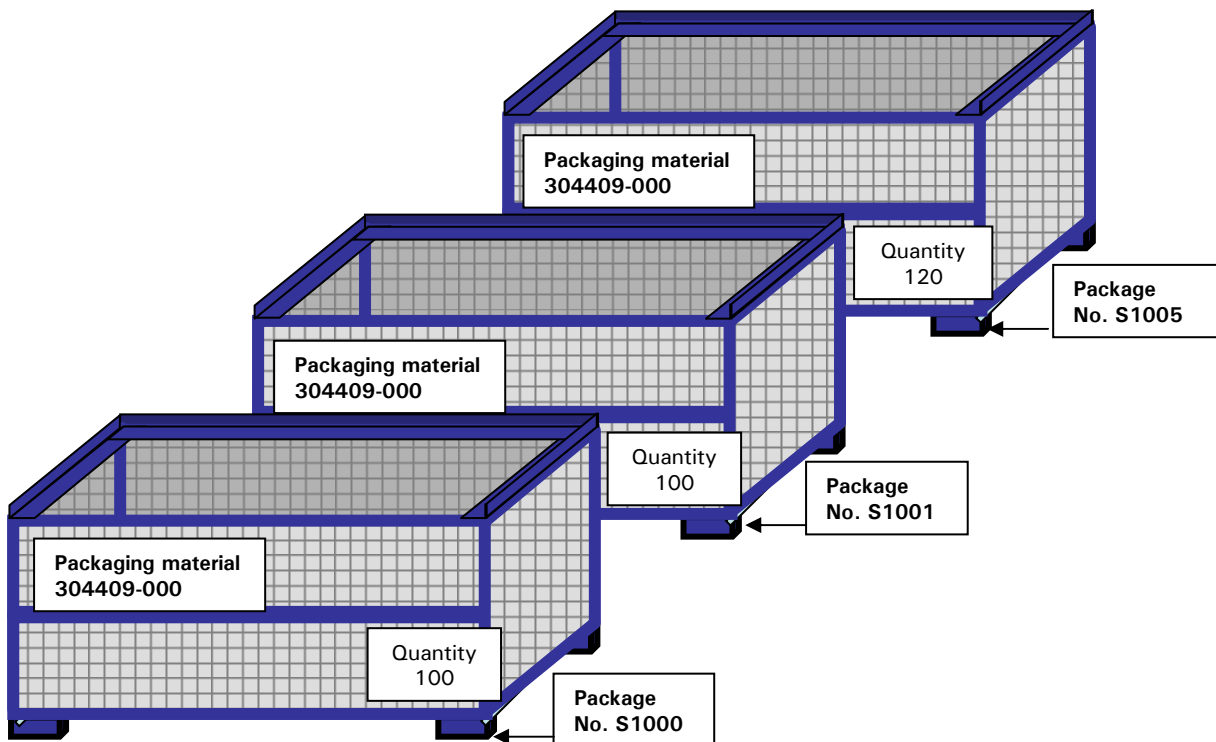

Coding (extract):

Record type 713; Delivery note No. 12345678					
Record type 714 (Pos.001); Material number105918-100; Delivery quantity 320					
Record type 715					
Packaging material – Customer material number M/A	Quantity packaging material M/N	Fill quantity K/N	Package No. from K/A	to K/A	Labelling K/A
304409-000	0000000000002	0000000000100	1000	1001	S
304409-000	0000000000001	0000000000120	1005	-	S

**Example2: Loading unit 'just one material number' with box tag per single container**

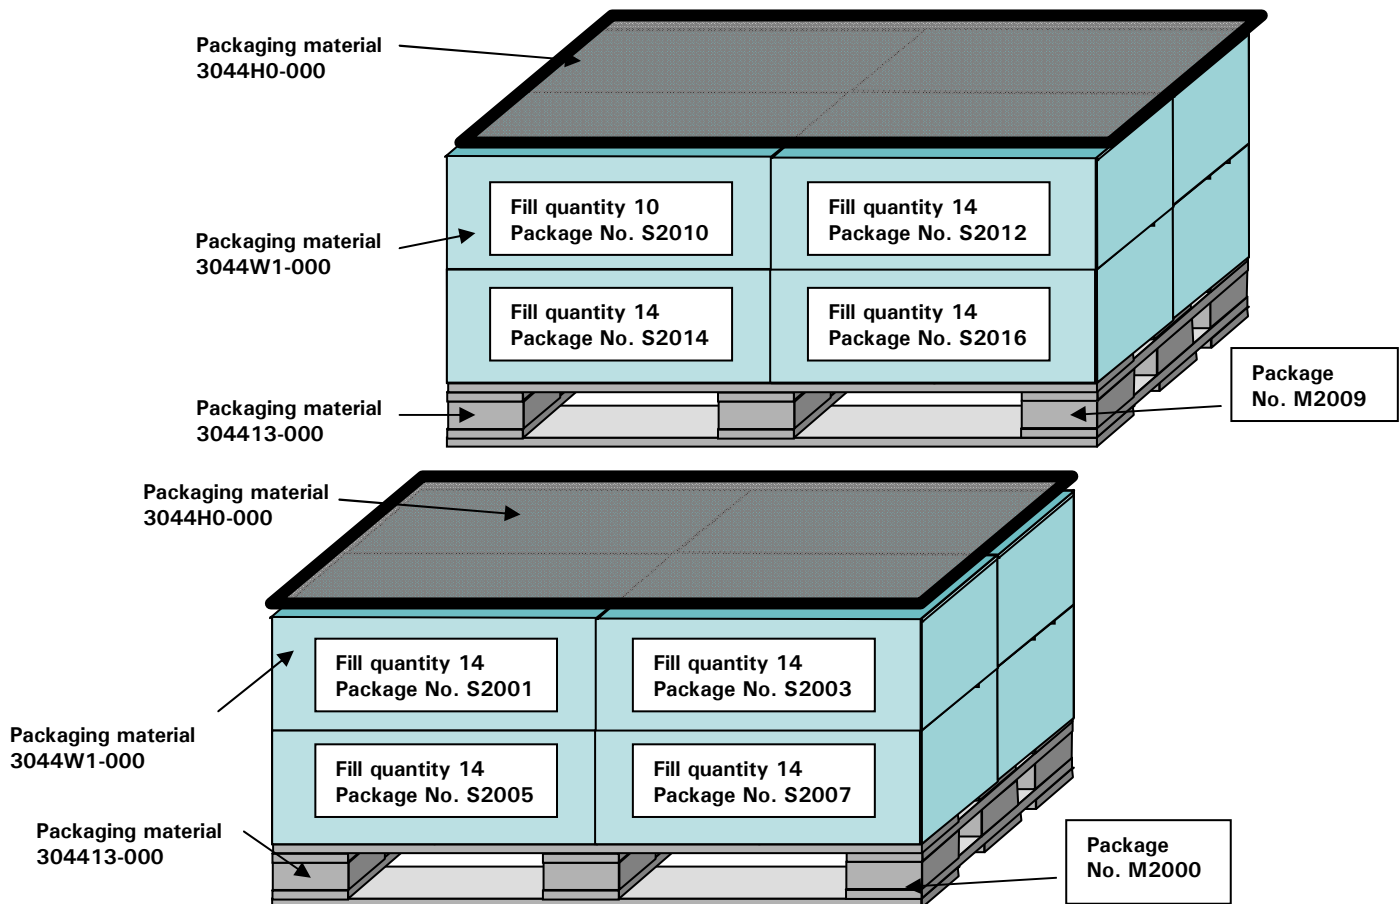


**Coding (extract):**

Record type 713; Delivery note No. 23456789					
Record type 714 (Pos.001); Material number 105919-100; Delivery quantity 220					
Record type 715					
Packaging material – Customer material number M/A	Quantity packaging material M/N	Fill quantity K/N	Package No. from K/A	to K/A	Labelling K/A
304413-000	00000000000001	00000000000000	2000	-	M
3044W1-000	00000000000008	00000000000014	2001	2008	S
3044H0-000	00000000000001	00000000000000	-	-	-
304413-000	00000000000001	00000000000000	2009	-	M
3044W1-000	00000000000001	00000000000010	2010	-	S
3044W1-000	00000000000007	00000000000014	2011	2017	S
3044H0-000	00000000000001	00000000000000	-	-	-

For every M-Label the "quantity of the packaging material" has to be 1.  
You have to follow the sequence of the labels (M, S, -).

**Example3:**

**Physical delivery:** Loading unit with 2 different material numbers  
Single containers are „just one material number“

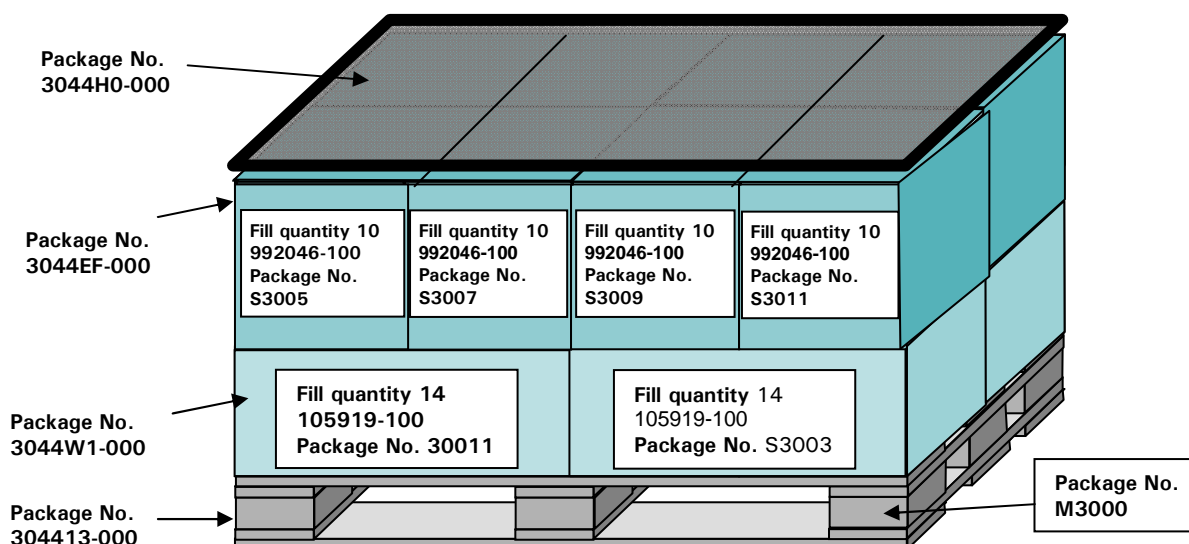

**Split in part numbers:**


Delivery split into two delivery notes with one material number each.

Brose works with delivery notes that have one position only.

The first delivery note contains beneath the single containers the pallet and the lid.

The single containers of the second delivery note are virtually put under **dummy packaging code 30448Z-888**. The delivery paperwork has got to reflect the split in part numbers.


The container mentioned above is realised as follows in the EDI-message:

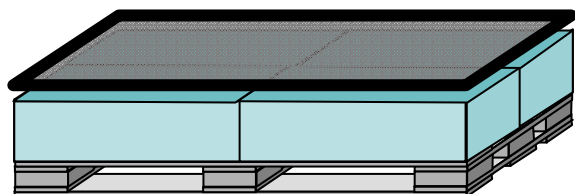

Delivery note No. 34567890

Coding (extract):

Record type713; Delivery note No. 34567890					
Record type714 (Pos.001); Material number 105919-100; Delivery quantity 56					
Record type715					
Packaging material – Customer material number M/A	Quantity packaging material M/N	Fill quantity K/N	Package No. from K/A	to K/A	Labelling K/A
304413-000	0000000000001	0000000000000	3000	-	M
3044W1000	0000000000004	0000000000014	3001	3004	S
3044H0-000	0000000000001	0000000000000	-	-	-

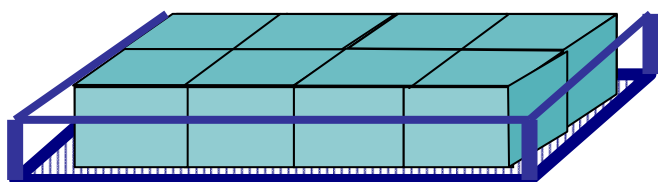

30448Z-888  
Dummy packaging

Delivery note No. 45678901

Coding (extract):

Record type713; Delivery note No. 45678901					
Record type714 (Pos.001); Material number 992046-100; Delivery quantity 80					
Record type715					
Packaging material – Customer material number M/A	Quantity packaging material M/N	Fill quantity K/N	Package No. from K/A	to K/A	Labelling K/A
30448Z-888	0000000000001	0000000000000	3013	-	M
3044EF-000	0000000000008	0000000000010	3005	3012	S